



SuperTank International Co.
84-A Kaengin Road Balintawak, Quezon City
Trunkline : 359-6-359 Local 123
Tel/Fax : 414-6-441 to 44 Local 103
Email : SUPERTANKsalesteam@gmail.com
Website : http://SUPERTANK.ph.tc

S E R V I C E D E P A R T M E N T

- The TWO YEARS WARRANTY on BLU MAGIC MEMBRANE TANK will be forfeited if one of the following occurs
 - If "Pre-Charged" air is not maintained at 19 PSI (in general) or 1-2 PSI less than the starting pressure of the pressure switch used in the system; (A quarterly maintenance check should solve this problem)
 - If Rust formed on the tank outside body due to inadequate protection against exposure to natural element/s.
 - If Vacuum occurred due to wrong installation or due to defective parts within the water system, this usually happens when the tank is installed "considerable" higher than the source.
- Warranty doesn't cover the cost of piping materials, delivery cost, or the cost of dismantling, re-installation, and/or other related works, as the Warranty only covers defective BLU MAGIC MEMBRANE TANKS provided that it is used under normal working conditions.

M A I N T E N A N C E G U I D E

- Check the Pressure Settings. Turn-Off the electric supply of Water Pump. Close the Gate Valve coming from the source of water (supply going to the pump)
- Drain the Water inside the Blu Magic Tank, open the supply line until the Pressure Gauge turns to Zero (0) PSI
- Check the Pre-Charge Air of Blu Magic Tank using the Tire Gauge. Insert it to the Pin hole (upper side of the Blu Magic Tank). Pre-Charge Air must be 2 PSI lower than the Cut-in of Pressure Settings. For Example,

Pressure Settings		Pre-Charge Air
Cut-In	Cut-Off	Pressure
20	40	18 PSI
30	50	28 PSI
40	60	38 PSI

If the Pre-Charge Air is over charged, it can be lessen by pressing the pin hole.

- To get the System in operation after charging the Air. Open the Gate Valve coming from the source of water afterwards the electric supply, automatically the Water Pump will start to run

WARNING

- Ang maling pag-aadjust ng Pre-Charge Air sa loob ng Blu Magic Tank ayon sa Cut-in ng Pressure Switch ay makakasira at tuluyang mapupunit ang Rubber Butyl Diaphragm o Bladder sa loob ng tangke. Sa ganitong pagkakataon hindi na ito sakop ng garantiya
- Kinakailangan din ang pagkabit ng Pressure Relief Valve dahil ang hindi pagkabit nito ay maaring maging sanhi ng pagkasira ng tangke sa oras na mag-malfunction ang pressure switch
- Iwasan ipuwesto ang Blu Magic Tank sa lugar na binabaha at naaarawan, lagan ng bubong o malit na bahay para sa tanke.
- Siguraduhin nakapatay ang linya ng kuryente sa tuwing magkakabit o aayusin ang inyong Water Pump at Blu Magic Tank



TIRE
GAUGE



FOOT PUMP
BMI-6V to BMI-80V



AIR COMPRESSOR
BMI-120V to BMI-800V